


ITEM NO.	QTY.	PART NO.	DESCRIPTION
1	1	111850	ASSY, SPS WORKSTATION
2	1	115398	ASM, SAFETY FENCE, SPS, 620 4SPAN
3	1	109438	SSR Station Level Electrical Cabinet, Assembled
4	1	109944	ASM, MAINTENANCE PLATFORM, FOR 620 WIDE CONVEYOR, RPS
5	2	112985	LINEAR SHUTTLE, W. WITH CABLES
6	1	110010	STAGING PLATFORM FOR MANUAL PICK STATION
7	1	114532	RSPS HMI INTERFACE ASSEMBLY
8	2	112445	FOUR SPAN WING HALF-R1
9	2	112447	FOUR SPAN WING HALF-R2
10	4	112911	AXIS CAMERA MOUNTING KIT WITH CABLES
11	2	113772	AXIS CAM POST BRACE MEMBER LONG
12	4	112910	LASER DISTANCE SCANNER MOUNTING KIT WITH CABLES
13	2	109865	ASM, I/O MODULE MOUNTING KIT 2, RPS
14	2	109861	I/O MODULE MOUNTING KIT 1, RPS
15	1	114746	KIT, 90 DEG SCANNER MOUNTING BRACKET, WITH CABLES
16	1	114686	STATION LEVEL WIREWAY, RPS/RSPS
17	8	114885	SIGN, MOVING PARTS, 10" X 7", 0.40 THK ALUMINUM
18	2	114999	STICKER, DO NOT STEP, 2" OD, 2MIL POLYESTER
19	2	115001	STICKER, NO SITTING, 2" OD, 2MIL POLYESTER
20	1	110747	RPS SHEET METAL POWER SUPPLY MOUNTING KIT - 620MM CONVEYOR BF
21	4	109646	PULLCORD E-STOP ASSEMBLY KIT 1 (FOR SAFETY FENCE)
22	2	115879	KIT, TOP MOUNTED BACKBOARD

REV. ECO				DESCRIPTION	DATE APPROVED
M	FST-12241	INITIAL DRAWING RELEASE	4/9/2022	KCG	
N	FST-12280	CHANGING TOLERANCE OF DISTANCE BETWEEN 4SPAN AND 1-BEAM	7/19/2022	KMW	
P	FST-12295	ADD BACKBOARDS	8/2/2022	B.B	



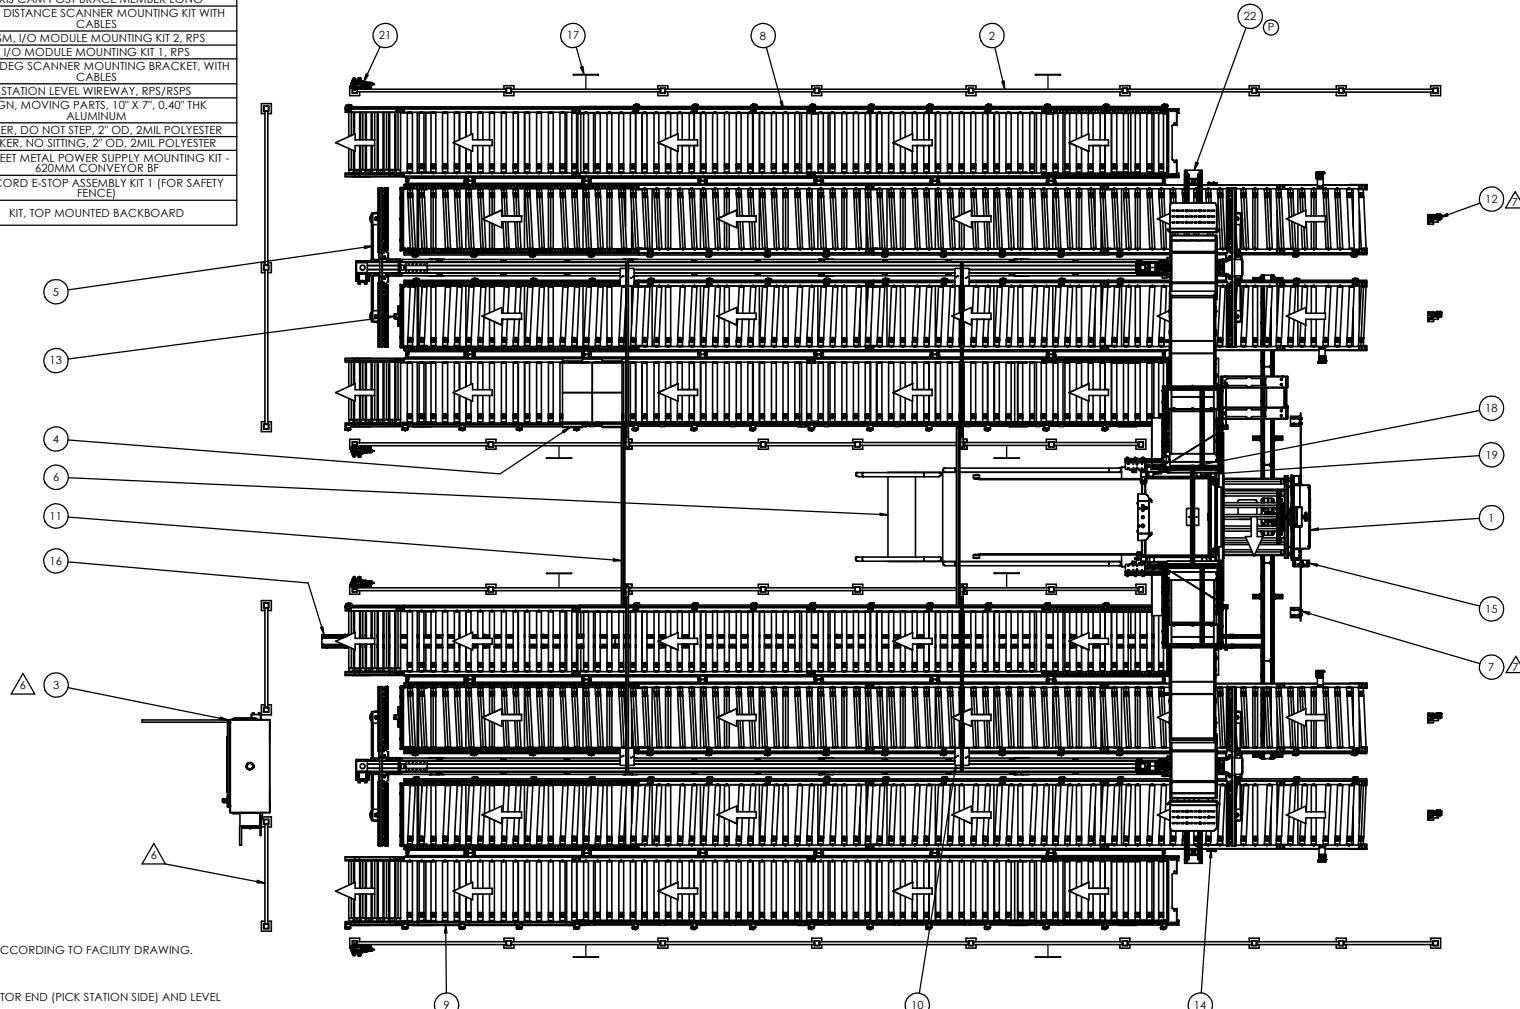


NOTES:

1. LOCATE AND PLACE PICK CELL FIRST ACCORDING TO FACILITY DRAWING.
2. SET PICK HEIGHT AND LEVEL STATION.
3. LOCATE AND PLACE LSW.
4. SET HEIGHT OF I-BEAM FROM NON-MOTOR END (PICK STATION SIDE) AND LEVEL FROM THERE.
5. VERIFY MEASUREMENT AT EACH JOINT OF CONVEYOR.
6. SET OUTBOUND BOX LINE SAFETY FENCE AND ELECTRICAL CAB 2-3 INCHES OFF OF 3RD PARTY CONVEYOR. SEE SPECIFIC FACILITY DRAWING FOR MORE DETAIL.
7. ITEM IS SECURED OR PARTIALLY SECURED TO 3RD PARTY CONVEYOR.

ITEM NO.	NAME	DATE	DESCRIPTION
1	4SPAN	4/10/2022	SPS STATION TOP LEVEL, 620MM 4-SPAN, 620 TOR, 3 CLEAT BOXES
2	BEAMS	4/10/2022	
3	LSW	4/10/2022	
4	ECR APPN	4/10/2022	
5	SEE NOTE	4/10/2022	
6	SEE NOTE	4/10/2022	
7	SIZE / PART NUMBER:	D	112406
8	REV.:	P	



SOME ITEMS HIDDEN FOR CLARITY

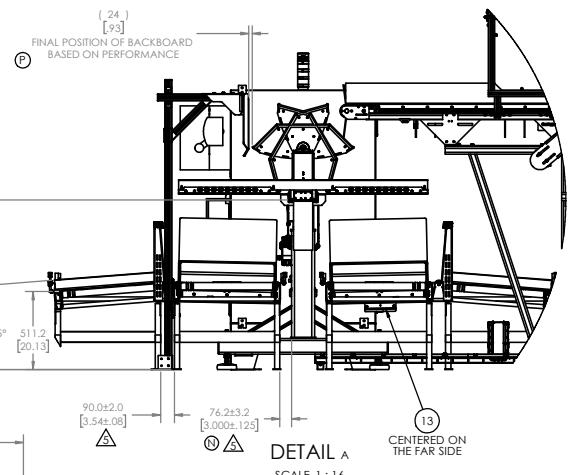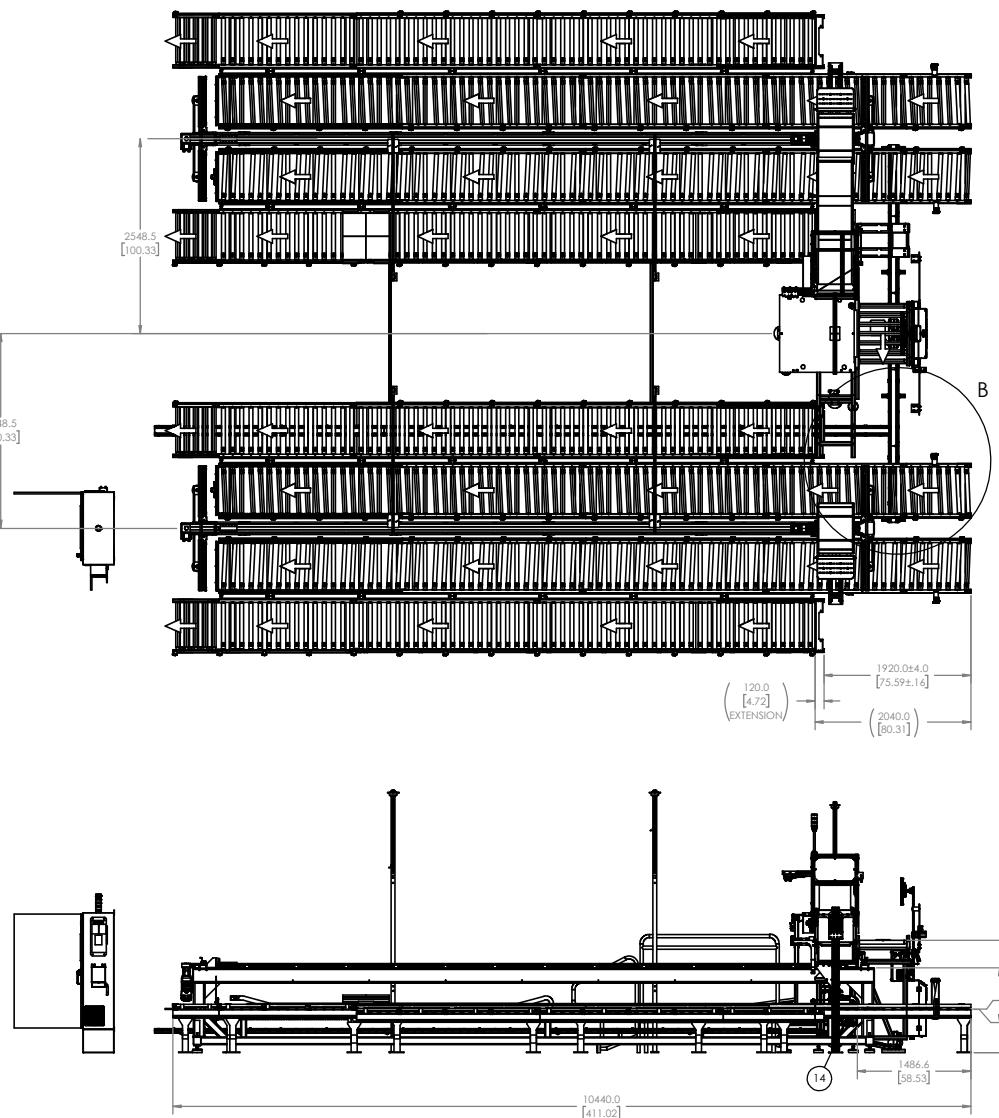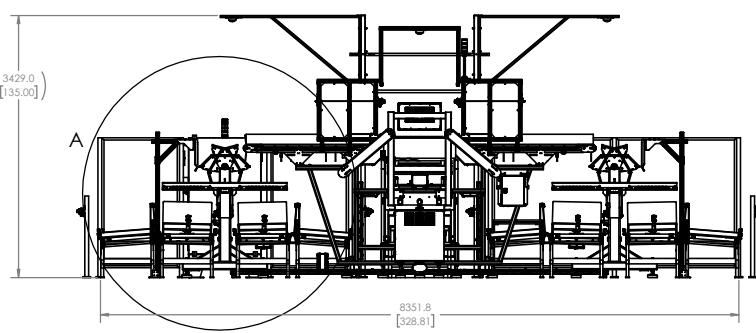DETAIL B
SCALE 1:16

DESCRIPTION:
SPS STATION TOP LEVEL, 620MM 4-SPAN, 620 TOR, 3 CLEAT BOXES

SIZE PART NUMBER: D REV: P
BERKSHIRE GREY SCALE 1:16 WEIGHT: 112406 SHEET 2 OF 3

SOME ITEMS HIDDEN FOR CLARITY
REFERENCE DIMENSIONS INDICATE PANEL LENGTH

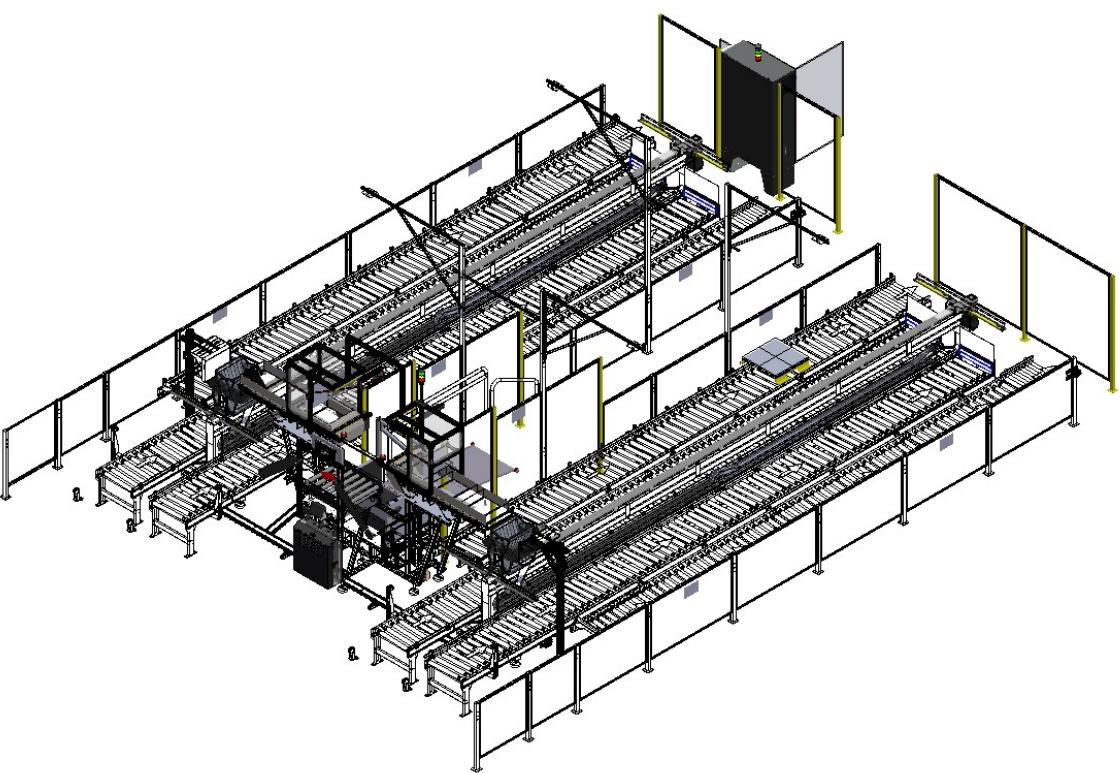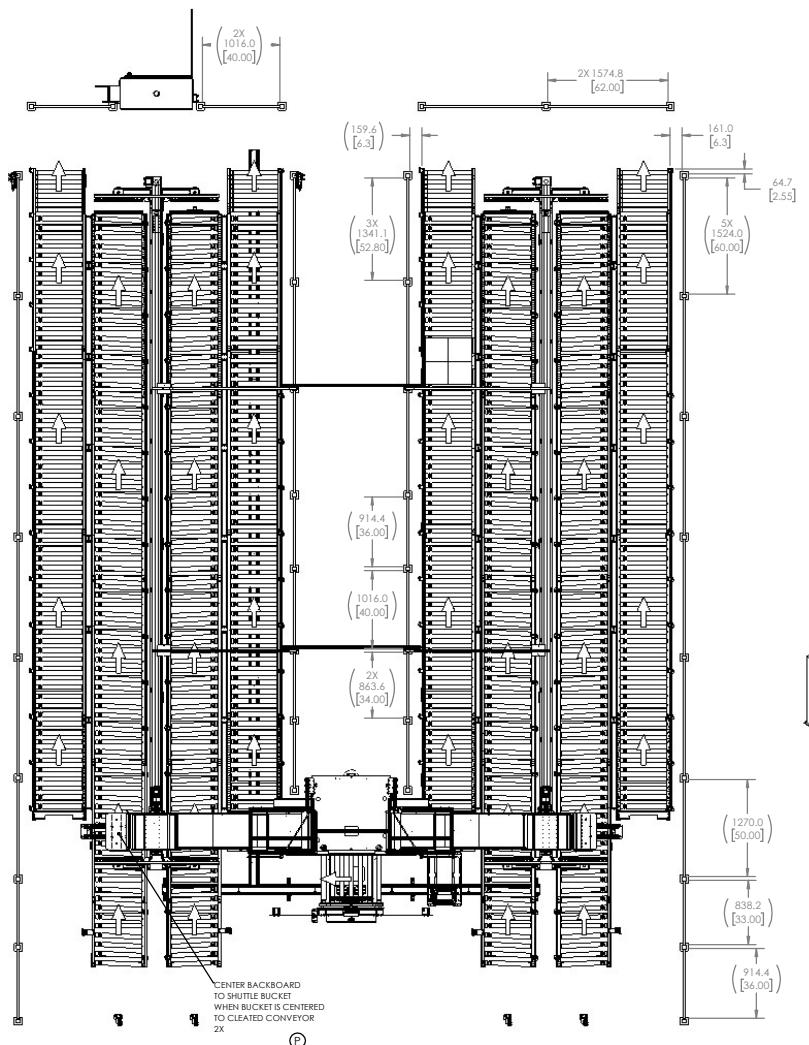

DESCRIPTION:	
SPS STATION TOP LEVEL, 620MM 4-SPAN, 620 TOR, 3 CLEAT BOXES	
SIZE PART NUMBER:	D 112404
REV:	P